



SOLYX GO User Manual

METER Group, Inc.
2365 NE Hopkins Court, Pullman, WA 99163
T 509.332.5600 W metergroup.com
E support.environment@metergroup.com

6. Record a measurement to check that the replacement tine module is functioning.

Refer to the user manual or Quickstart Guide for measurement recording.


7. Screw the two Phillips head screws into the unit to secure the new module.



METER

SOLYX GO REPLACEMENT TINE INSTRUCTIONS

1. Remove both Phillips head screws at either end of SOLYX GO tines module.

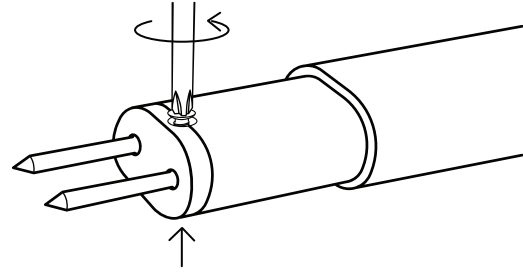

cut

18609-00
08.2026



SOLYX GO User Manual

METER Group, Inc.
2365 NE Hopkins Court, Pullman, WA 99163
T 509.332.5600 W metergroup.com
E support.environment@metergroup.com

6. Record a measurement to check that the replacement tine module is functioning.

Refer to the user manual or Quickstart Guide for measurement recording.


7. Screw the two Phillips head screws into the unit to secure the new module.



METER

SOLYX GO REPLACEMENT TINE INSTRUCTIONS

1. Remove both Phillips head screws at either end of SOLYX GO tines module.

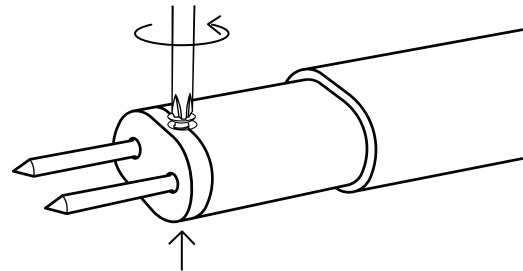

cut

18609-00
08.2026



SOLYX GO User Manual

METER Group, Inc.
2365 NE Hopkins Court, Pullman, WA 99163
T 509.332.5600 W metergroup.com
E support.environment@metergroup.com

6. Record a measurement to check that the replacement tine module is functioning.

Refer to the user manual or Quickstart Guide for measurement recording.


7. Screw the two Phillips head screws into the unit to secure the new module.



METER

SOLYX GO REPLACEMENT TINE INSTRUCTIONS

1. Remove both Phillips head screws at either end of SOLYX GO tines module.

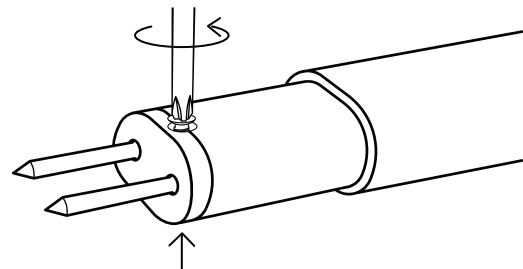


cut


cut

Fold at 4 inches


2. Remove tine module. If needed, loosen using a flathead screwdriver in the notch where the sensor makes contact with the metal shaft.

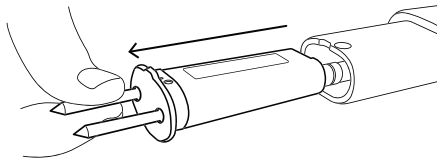


3. Unscrew the M8 cable connector from the module and pull the connector out.

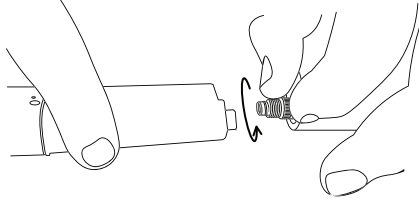


4. Connect to the new replacement tines by lining up the pins with the corresponding holes on the module and connecting the M8 cable.

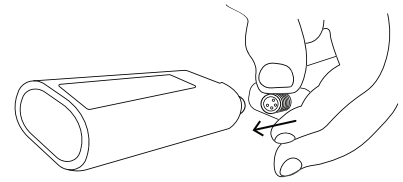


5. Push the tine module back into the metal shaft.

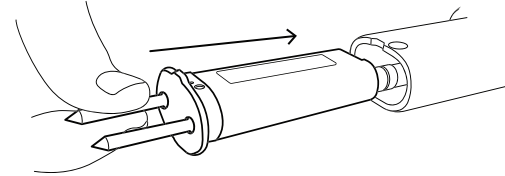


2. Remove tine module. If needed, loosen using a flathead screwdriver in the notch where the sensor makes contact with the metal shaft.

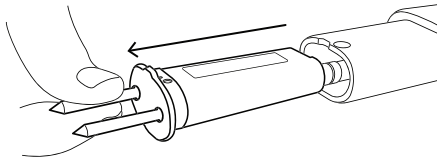


3. Unscrew the M8 cable connector from the module and pull the connector out.

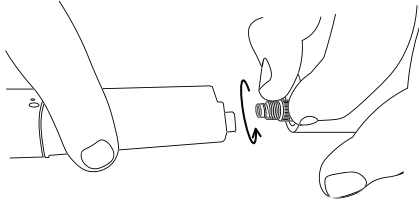


4. Connect to the new replacement tines by lining up the pins with the corresponding holes on the module and connecting the M8 cable.

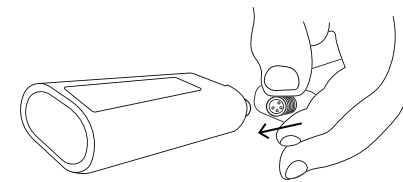


5. Push the tine module back into the metal shaft.

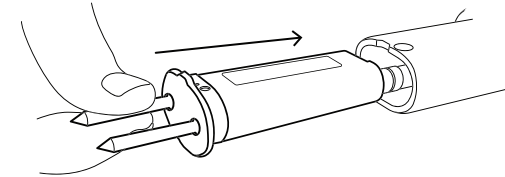


2. Remove tine module. If needed, loosen using a flathead screwdriver in the notch where the sensor makes contact with the metal shaft.

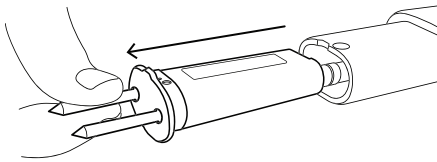


3. Unscrew the M8 cable connector from the module and pull the connector out.

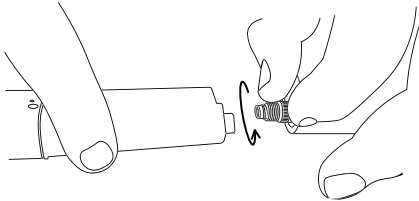

4. Connect to the new replacement tines by lining up the pins with the corresponding holes on the module and connecting the M8 cable.

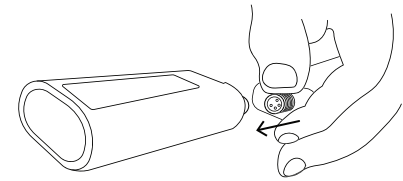

5. Push the tine module back into the metal shaft.

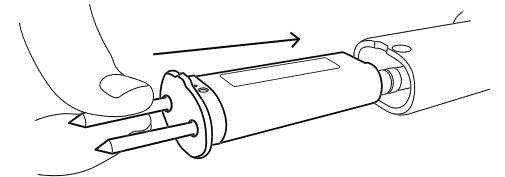

Fold at 4 inches