AquaLab **LITE** Quick Start

I Preparing for Operation

when first plugged in.

- Use AquaLab LITE on a level surface.
- Use AquaLab LITE where the temperature remains fairly stable.

II Power Adaptor

• Use 9-24V DC or AC Adaptor (>400mA)

AguaLab LITE automatically turns on



- Pressing any button will turn AquaLab LITE on.
- AguaLab LITE shuts off by pressing left button from main menu or if idle for more than 15 minutes.
- The following screens will appear on the display:



III Sample Preparation

- 1. Fill sample cup no more than half full (~7ml). DO NOT OVERFILL!
- 2. Minimum sample amount should cover bottom of sample cup (small gaps OK).
- 3. Ensure the rim and outside of sample cup are clean.
- 4. Ensure sample temperature is not more than 4°C above the chamber temperature.

IV Sample Insertion

- 1. Open AquaLab LITE by pushing the latch slide to the right.
- 2. The top half of the AquaLab LITE will automatically open.
- 3. Place your prepared sample cup inside the instrument's cup holder.
- 4. Press down on the front top of the case to seal the cup inside.
- 5. Press center button to start measurement.







AquaLab **LITE** Quick Start

V The Menus

· Press the right button to proceed to the system menu.

'Calibrate' Function

- Calibration needs to be verified daily or before each use.
- Decagon's Verification Standards are required for calibration.
- · See Chapter 4 of the manual for more details.
- 1. Select calibration solution (0.25, 0.50, 0.76a,) or "Auto" to automatically determine which calibration solution was inserted.

"Defaults" restores factory calibration settings. 2. The word "CAL" will appear after the water

activity value. 3. Once the reading is complete, verify salt standards to within ±0.015a,... Press the middle button to save a new calibration.

'Language' Function

- English Deutsch Français Italiano • Ξ
- 1. Press the center button when the Language function is highlighted.
- 2. Press the left button to scroll through options.
- 3. Press the center button to accept the highlighted language.

'Diagnostic' Function

- Press center button when the Diagnostic button is highlighted.
- MAIN CONFIG 71.9% (28731) Lid 24.2°C 24.1°C 83mV
- · Reports realtime values of sensors.
- Use for determining thermal equilibrium and troubleshooting.

VI Cautions

- Sample temperature >4°C causes error message.
- Do not fill the sample cup more than half full.
- Never tip or move AquaLab LITE with sample loaded.
- Never leave a sample in your AquaLab LITE.

Decagon Devices

2365 NE Hopkins Ct. Pullman, WA 99163 aqualab@decagon.com www.decagon.com/aqualab/ ©2004-2010 Decagon Devices, Inc. Ver. 1.3 For technical support and AquaLab LITE supplies call:





10546-05





0.369 aw

22.4°C

MAIN CONFIG

Language: English Contrast

alibrate

Diagnostics

MAIN CONFIG

MAINCONFIG

<mark>Auto</mark> Manual Defaults

Ð