


# TEROS BOREHOLE INSTALLATION TOOL **ASSEMBLY INSTRUCTIONS**



# TEROS BIT ASSEMBLY INSTRUCTIONS

Watch a video demonstration at How to Assemble the Borehole Installation Tool (metergroup.com/how-to-assemble-BIT).

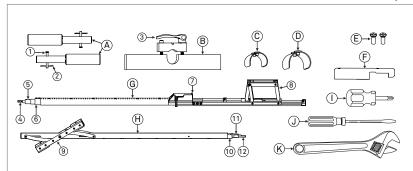

- A. Handles
- B. Base plate
- C. Middle clip (1.0 in)
- D. Outer clip (1.25 in)
- E. Screws
- G. Lower assembly
- H. Upper assembly
- Flat-head screwdriver
- Phillips®-head screwdriver
- K. Crescent wrench

Connect inner rods

- 1. Hair pin
- 2. Clevis pin (adjustable)
- 3. Cam lever
- 4. Lower inner rod
- 5. Lower middle sleeve
- 6. Lower middle collar
- 7. Stop
- 8. Sensor carriage
- 9. Lever
- 10. Upper inner rod
- 11. Upper middle collar

**△** CAUTION

 
Be careful to not pinch fingers when moving (8).

12. Upper outer sleeve

NOTE: The assembled TEROS BIT is more than 8 ft long. Find a suitable assembling area that is flat and large enough. A 4-in auger with handle and extensions is included to aid in sensor installation.


#### ATTACH UPPER INNER ROD + LOWER INNER ROD

- 1. Lay G and H as shown.
- 2. Move (9) on H to Upper position 1.
- 3. Move (8) on G to Lower position 1.
- 4. Align (4) and (12) so screw holes line up.
- 5. Insert E screws in each screw hole and tighten with I.




## ATTACH UPPER MIDDLE SLEEVE + LOWER MIDDLE COLLAR

 - 1. Move (8) on G to Lower position 2. Lower position 2 is when the inner rod is pushed all the way to (7); the sensor carriage will be in an extended position as shown.
- 2. Insert the jig (F) into the sensor carriage to hold sensor in place.






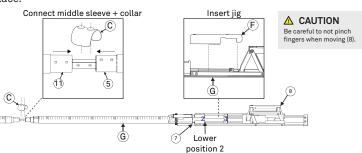


### ATTACH OUTER SLEEVE + COLLAR

- 1. Rotate (9) on H and pull (6) until it slips over (10); align holes.
- 2. Install D into the holes of (6) and (10). Make sure clip is seated all the way.

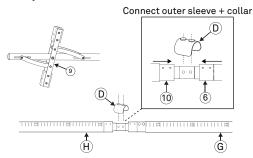

# **HANDLES + BASE PLATE**

- 1. Insert A on (9). Insert (1) through hole in A and (9) and secure with (2).
- 2. Install B on G. Rotate top of B over G. Insert bolt and tighten. Leave the bolt a little loose so B can be moved up and down G.
- 3. Use (3) to adjust B for desired installation depth.

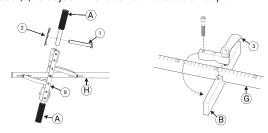

## **SUPPORT**

Have a question or problem? Our support team can help.

We manufacture, test, calibrate, and repair every instrument in house. Our scientists and technicians use the instruments every day in our product testing lab. No matter what you question is, we have someone who can help you answer it.

#### **NORTH AMERICA**

Email: support.environment@metergroup.com Phone: +1.509.332.5600

#### EUROPE

Email: support.europe@metergroup.con Phone: +49 89 12 66 52 0