



# BIRD DETERRENT INSTALLATION INSTRUCTIONS

18300-01  
8.16.2019

## METER

### Items Included


- Spikes (13)
- Spike ring (1)

### Required Tools (not included)

- Pliers

### Assembly Instructions

1. Count all parts to ensure nothing was lost in shipping. Contact Customer Support ([metergroup.com](http://metergroup.com)) if anything is missing.
2. Gently press a bird spike into a slot on the bird spike ring by hand.
3. Using pliers, pinch the bird spike near the base and press down until fully seated.
4. Repeat for all bird spikes.
5. Tug upward on each spike to make sure the pins were all pressed in.
6. Position the ring on top of the ATMOS with the pyranometer sensor between two spikes; this will limit spike shadows on the sensor.
7. Press finished bird deterrent onto ATMOS funnel to at least the depth shown in the figure.

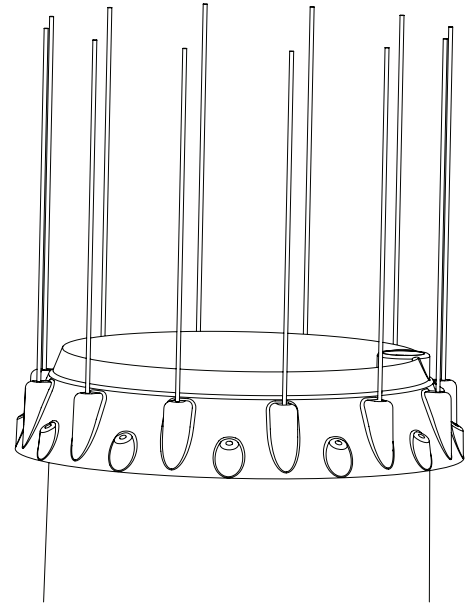

**METER Group, Inc. USA**  
 2365 NE Hopkins Court, Pullman, WA 99163  
 T +1.509.332.2756 F +1.509.332.5158  
 E [info@metergroup.com](mailto:info@metergroup.com) W [metergroup.com](http://metergroup.com)

**NORTH AMERICA**  
 E [support.environment@metergroup.com](mailto:support.environment@metergroup.com)  
 T +1.509.332.5600

**EUROPE**  
 E [support.europe@metergroup.com](mailto:support.europe@metergroup.com)  
 T +49 89 12 66 52 0



# BIRD DETERRENT INSTALLATION INSTRUCTIONS

18300-01  
8.16.2019

## METER

### Items Included


- Spikes (13)
- Spike ring (1)

### Required Tools (not included)

- Pliers

### Assembly Instructions

1. Count all parts to ensure nothing was lost in shipping. Contact Customer Support ([metergroup.com](http://metergroup.com)) if anything is missing.
2. Gently press a bird spike into a slot on the bird spike ring by hand.
3. Using pliers, pinch the bird spike near the base and press down until fully seated.
4. Repeat for all bird spikes.
5. Tug upward on each spike to make sure the pins were all pressed in.
6. Position the ring on top of the ATMOS with the pyranometer sensor between two spikes; this will limit spike shadows on the sensor.
7. Press finished bird deterrent onto ATMOS funnel to at least the depth shown in the figure.

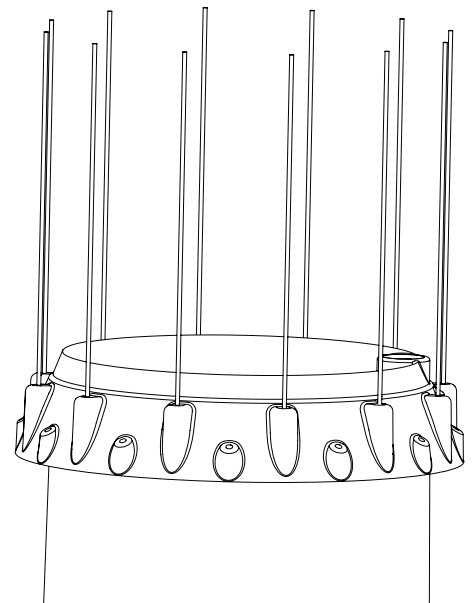

**METER Group, Inc. USA**  
 2365 NE Hopkins Court, Pullman, WA 99163  
 T +1.509.332.2756 F +1.509.332.5158  
 E [info@metergroup.com](mailto:info@metergroup.com) W [metergroup.com](http://metergroup.com)

**NORTH AMERICA**  
 E [support.environment@metergroup.com](mailto:support.environment@metergroup.com)  
 T +1.509.332.5600

**EUROPE**  
 E [support.europe@metergroup.com](mailto:support.europe@metergroup.com)  
 T +49 89 12 66 52 0