



ATMOS 22 SONIC ANEMOMETER

METER



SUPPORT

Have a question or problem? Our support team can help.

We manufacture, test, calibrate, and repair every instrument in house. Our scientists and technicians use the instruments every day in our product testing lab. No matter what your question is, we have someone who can help you answer it.

NORTH AMERICA

Email: support.environment@metergroup.com
Phone: +1.509.332.5600

EUROPE

Email: support.europe@metergroup.com
Phone: +49 89 12 66 52 0

ATMOS 22 QUICK START

Preparation

Verify that all ATMOS 22 components arrived intact. Installation will require a 13-mm (1/2-in) wrench and a secure mounting location. METER recommends a meteorological stand, pole in cement, or tripod with a 31.8- to 50.8-mm (1.25- to 2-in) diameter.

Set up and test the system (sensors and data loggers) in a lab or office. Ensure the data loggers are using up-to-date firmware and software. Verify all sensors read within expected ranges.

Before beginning installation, consider the surroundings and avoid obstructions. Many installations require the ATMOS 22 to be mounted 2 m above ground, but this can be adjusted as needed.

Please read the complete ATMOS 22 User Manual at metergroup.com/atmos22-support. All products have a 30-day satisfaction guarantee.

Connecting

Plug into Data Acquisition System

Connect the stereo plug connector into any METER data logger and configure it to read the ATMOS 22 (refer to [ATMOS 22 User Manual](#)). Select a nonzero measurement interval to ensure data are being logged.

To connect to a non-METER data logger, see the ATMOS 22 Integrator Guide at metergroup.com/atmos22-support. For non-METER systems read the information located at metergroup.com/environment/articles/tech-note-ds-2-to-atmos-22.

Verify Readings

Use the scan function in the software to show a list of readings. Verify these readings are within expected ranges.

⚠ ATTENTION

ATMOS 22 requires the following software and firmware versions. Please make updates as necessary.


- ZL6** firmware version 2.02 or higher
- PROCHECK** firmware version 1.67 or higher
- ZENTRA Utility** version 1.09 or higher

Go to metergroup.com/environment/downloads to find the current software or firmware version for the data logger being used.

Installation


1. Mount Toward True North

The ATMOS 41 must be oriented with the engraved **N** on the instrument oriented to true north (not magnetic north).

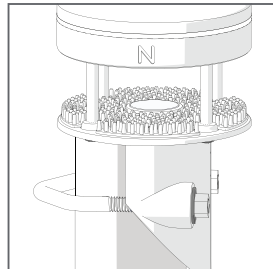

2. Level the System


Use the bubble level underneath the ATMOS 22 or a PROCHECK display to level the sensor. The mounting pole may need to be leveled or shims may need to be applied.

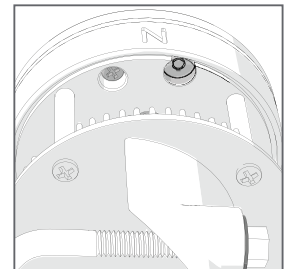

3. Secure the System

Tighten the V-bolt nuts by hand until hand-tight, and then gently tighten with a wrench.

CAUTION: Do not overtighten V-bolt.

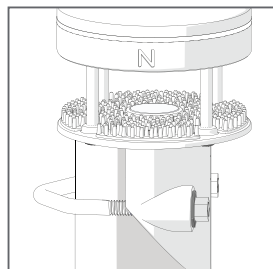

4. Plug Sensor In and Configure Logger

Plug stereo plug connector into the data logger. Use data logger software to apply appropriate settings to the sensors plugged into each data logger port.

