



METER

ATMOS 41W/ATMOS 41 GEN 2

18575-00
2.2025

Wind Speed Collar

This document instructs how to re-zero the windspeed for the ATMOS 41W and ATMOS 41 GEN 2 for the wind speed collar installation.


Zentra Utility Mobile must be installed and accessible on a mobile device in order to properly re-zero the wind speed. Ensure Zentra Utility Mobile version 1.16 or later is downloaded. To download Zentra Utility Mobile scan the QR code or go to <https://meter.ly/4a7d03D>.




Cut/trim at 5 3/8
(5.375) inches

RE-ZEROING FOR THE ATMOS 41W

1. Disconnect the ATMOS 41W rain funnel.

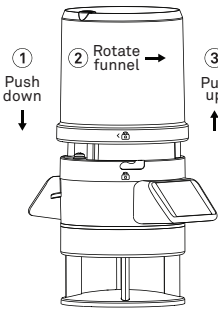


2. Press the TEST button. The green and red lights will blink, indicating the module is ready to connect with ZENTRA Utility Mobile.

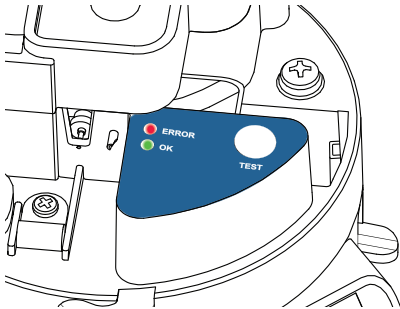

Score

3. Open the Zentra Utility Mobile app. There may be a prompt to conduct a firmware update. Update the firmware by following the directions on screen before continuing.

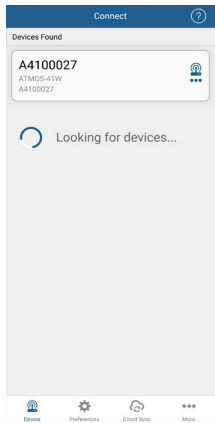


Cut/trim 1 inch of bottom
for end dimensions 5.375 x
10 inches before folding.


4. Select the ATMOS 41W from the **Devices Found** window.
5. At the bottom right of the screen select **More**.
6. Select **Sensor Tools**
7. Select **Wind Speed Calibration**. Follow the prompts on Zentra Utility Mobile to attach the wind collar and re-zero wind speed for the ATMOS 41W.
8. Reconnect the rain funnel to the ATMOS 41W. Ensure the funnel is locked in place correctly before returning ATMOS 41W to the field.

RE-ZEROING FOR THE ATMOS 41 GEN 2


1. Open the ZL6

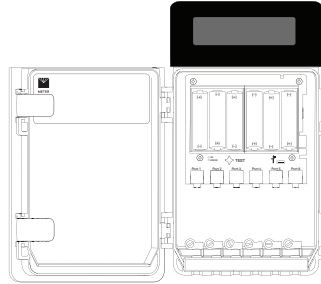

2. Press the **TEST** button.

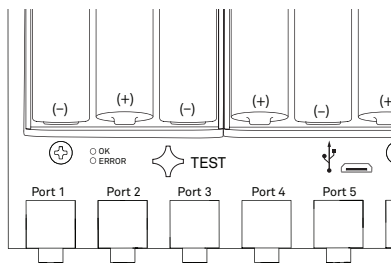

3. Open the Zentra Utility app and select the ATMOS 41 Gen 2 from the **Devices Found** window.

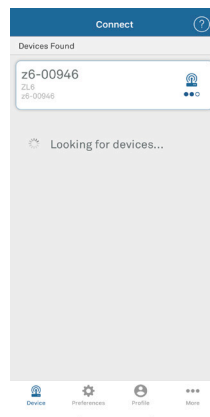

4. At the bottom right of the screen select **More**.
5. Select **Sensor Tools**
6. Select **Wind Speed Calibration**. Follow the prompts on Zentra Utility Mobile to attach the wind collar and re-zero wind speed for the ATMOS 41 Gen 2.