



AROYA SCALES INSTRUCTION SHEET

18441-00
1.15.2020

METER

Preparation

The AROYA H510 Portable Scale and H511 Bench Scale connect to app.roya.io on a Microsoft® Windows® personal computer (PC) or Apple® Mac® computer through the Google Chrome™ browser. The PC or Mac must be capable of using Bluetooth® Low Energy (BLE).

Confirm that the scale arrives intact.

Read the full Ohaus Ranger 3000 (for H510 portable scale) or Ohaus Defender 3000 (for H511 bench scale) manual at website ohaus.com.

Installation


Set up and prepare the scale by following the manufacturer's instructions.

NOTE: If an AROYA H512 Scale Cart will be used for the AROYA H510 Portable Scale to allow for hanging plants, please place the scale on the cart. Screw the hook (included with H510 portable scale) into the bottom of the scale before proceeding.


Visit app.roya.io on a PC or Mac through the Google Chrome browser.

Follow the AROYA app instructions for connecting to the scale and viewing weight measurements.

H510 Portable Scale

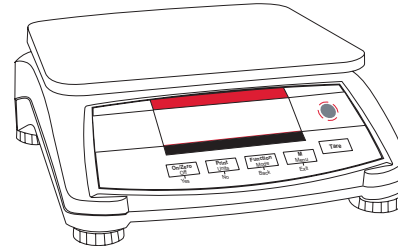

H511 Bench Scale

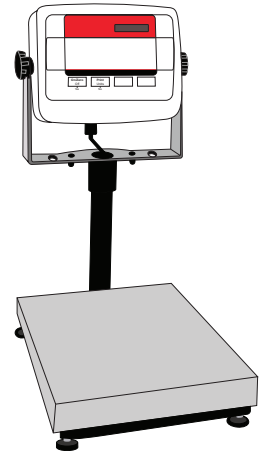

METER Group, Inc. USA

2365 NE Hopkins Court, Pullman, WA 99163

T +1.509.332.5844 F +1.509.332.5158

E support.roya@metergroup.com W metergroup.com