




ATMOS 41W WI-FI[®] ALL-IN-ONE WIRELESS WEATHER STATION

METER

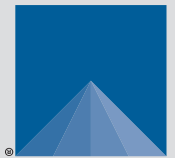

SUPPORT

Have a question or problem? Our support team can help.

We manufacture, test, calibrate, and repair every instrument in house. Our scientists and technicians use the instruments every day in our product testing lab. No matter what your question is, we have someone who can help you answer it.

NORTH AMERICA

Email: support.environment@metergroup.com
Phone: +1.509.332.5600

EUROPE

Email: support.europe@metergroup.com
Phone: +49 89 12 66 52 0

ATMOS 41W WI-FI QUICK START

Introduction

Prior to field installation, please verify all ATMOS 41W components arrived intact. Please carefully follow [Step 1](#) and [Step 2](#) before taking the device into the field for installation. Read the complete user manual at meter.ly/atmos41w-support.

Verify Wi-Fi

When evaluating where to install the ATMOS 41W, METER recommends verifying adequate Wi-Fi signal ([Step 3C](#)) for the chosen location. The Wi-Fi network signal must be strong enough for data to be transmitted to ZENTRA Cloud.

Data Access

ATMOS 41W data are accessed online via ZENTRA Cloud, a web application used to download, view, and share data as well as to change configurations.

The ATMOS 41W requires a paid subscription to use ZENTRA Cloud. See [Step 2](#) to learn how to add the ATMOS 41W to ZENTRA Cloud.

Save the orange device subscription card included with the ATMOS 41W in a safe location. This card contains the following information for the subscription:

- Device serial number
- Password
- Server name where sensor data is stored.

ATTENTION

For best results, use the latest versions of ZENTRA Utility Mobile software and ATMOS 41W firmware.

ZENTRA Utility Mobile will prompt with available updates for software and ATMOS 41W firmware. Consult the [ATMOS 41W User Manual](#) (meter.ly/atmos41w-support) for more troubleshooting tips.

1. Power On and Connect With ZENTRA Utility Mobile

A. Install ZENTRA Utility Mobile

On a smartphone or tablet, scan the **QR code** to install ZENTRA Utility Mobile.

If prompted, follow the instructions to update software or firmware.




B. Remove Rain Funnel

Press and twist rain funnel counter-clockwise to unlock from the base.

Carefully remove funnel.

 **CAUTION**
Do not disconnect the attached wire.

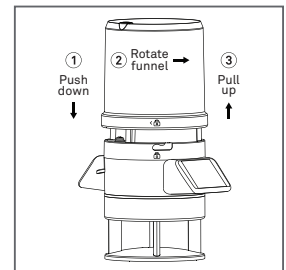


C. Power Up Device

Pull and remove the clear plastic pull tab to allow contact with installed batteries.


Status lights on blue overlay will blink, indicating power is available.

NOTE: The status lights will blink red, indicating an error, until connected to a Wi-Fi network.

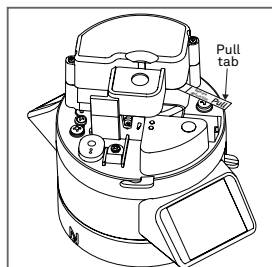

D. Activate Bluetooth® Module


With ZENTRA Utility Mobile open on your mobile device and ATMOS 41W rain funnel removed, push the **TEST** button on the blue overlay.

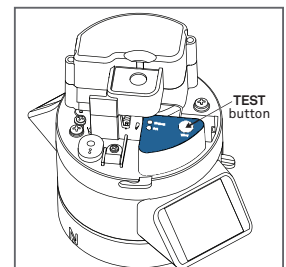

ATMOS 41W WI-FI QUICK START


E. Connect the ATMOS 41W

On the **Connect** screen in the app, tap on the desired device to connect. Bluetooth connection will be established and ATMOS 41W and sensor information will be retrieved.

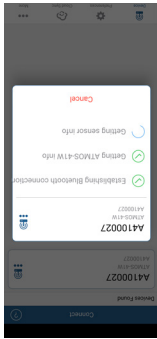


G. Connect to Wi-Fi Network

Tap Configure on main screen. Then tap Configure Wi-Fi Network to choose desired Wi-Fi network. Enter passphrase if network is secured. See the **ATMOS 41W User Manual** (meterly/atmos41wUM) if using an enterprise network. Tap Join to confirm network settings.

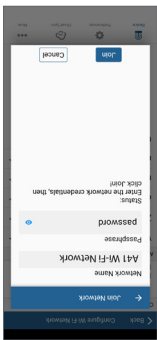

H. Verify Readings

Tap Back then Save to return to the main screen. Tap Refresh to display the list of readings. Verify that these readings are within expected ranges. The ATMOS 41W is now ready for use.

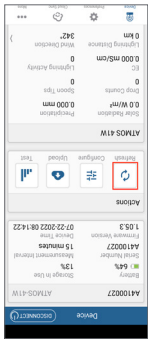


A. Create User Account

Using a web browser, navigate to the server listed on the orange Device Subscription card. Select the **Sign Up** button. Enter valid email address and user information. Accept **Terms and Conditions**.




C. Create Organization

Log into ZENTRA Cloud. Select **Create Organization**. Enter **Organization name**. Select **Role**. Select **Accept**.

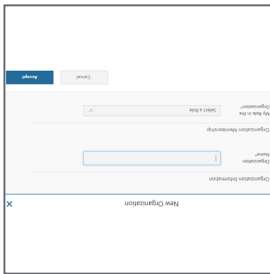


D. Add Device

Click on **Add New** button. Select **Device** from the menu. Enter the **Device Serial Number** and the **Device Password** from the orange Device Subscription card (remove from funnel and store in safe location). Click the **Create** button to the organization.

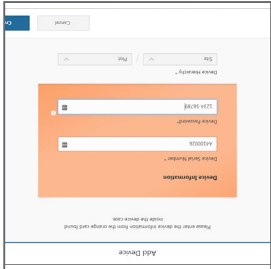


B. Verify User Account

Select the **Sign Up** button (generates email confirmation). Click on the hyperlink in the confirmation email to verify the user account.

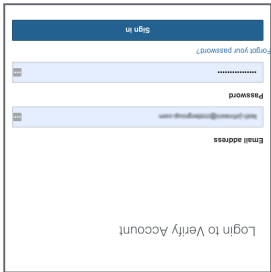

F. Replace Rain Funnel

Line up the padlocks, press down, and twist rain funnel clockwise until it locks. **NOTE:** Be sure the cable and internal spring are not pinched before closing.

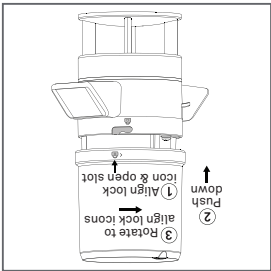

ATMOS 41W WI-FI QUICK START


3. Field Site Preparation

At the field site and prior to final installation, please do the following:

A. Identify Mounting Location—Landscape

Consider vegetation cover throughout the season, livestock, solar exposure, and wildlife activity.

If adhering to World Meteorological Organization (WMO)^a siting standards, make sure the mount location has minimal slope and low vegetation height.

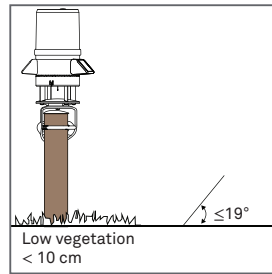


B. Identify Mounting Location—Interferences

Consider distance from interfering objects, power lines, metallic objects, sources of heat, bodies of water, and obstructions.

WMO siting standards recommend siting 100 m away from heat sources and bodies of water.

See the [ATMOS 41W User Manual](#) for more information.

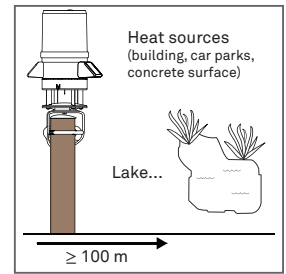


C. Check Wi-Fi Signal

Remove the rain funnel. Press the TEST button, connect to device in ZENTRA Utility Mobile.

Tap Test in ZENTRA Utility Mobile to check the quality of the Wi-Fi signal before finalizing installation.

Replace the rain funnel.

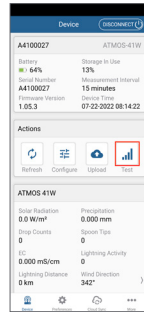


D. Install Mounting Pole

Use a mounting pole with a 31.8- to 50.8-mm (1.25- to 2.0-in) diameter.

Mount ATMOS 41W 2 m above ground (recommended). Height can be adjusted as needed.

Mounting pole should be within 4.5° of level.

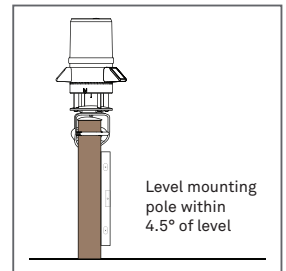


4. Field Installation

A. Mount ATMOS 41W Toward True North

Place the top of the post under the mounting shelf.


The ATMOS 41W must be set up with the engraved **N** on the instrument oriented to true north (not magnetic north).

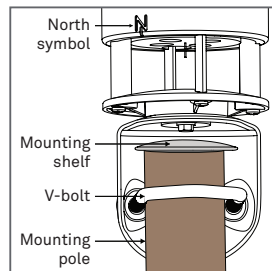

B. Mount and Secure Device

Tighten the V-bolt nuts by hand until hand-tight, and then tighten with the 13-mm wrench (included).


⚠ CAUTION
Do not overtighten the bolt.

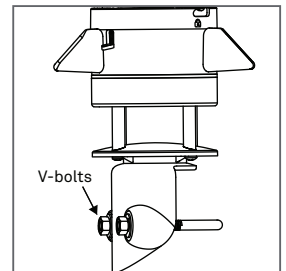

C. Level the Device

Use the bubble level underneath the ATMOS 41W.

The weather station angle can be adjusted by loosening the leveling screw attached to the bottom with the 8-mm wrench (included), moving the weather station side to side as needed to level, and then retightening the screw.

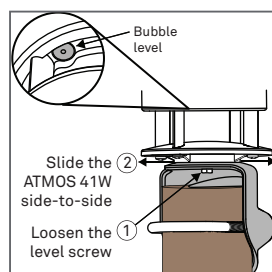

D. Reverify Communication and Wi-Fi Signal

Use ZENTRA Utility Mobile to review instantaneous measurements and verify the sensor is working as expected.

Tap **Test** in ZENTRA Utility Mobile to check the quality of the Wi-Fi signal before finalizing installation.

The ATMOS 41W is now installed and data should be available after the first upload.

