



METER

TEROS 32 INTEGRATOR GUIDE

SENSOR DESCRIPTION

The TEROS 32 Soil Water Potential and Temperature sensor is a precision tensiometer that measures water potential in the critical range (-85 kPa to $+50$ kPa) for water movement, critical range for plant response, and slope stability with its ability to measure positive pore pressures. The TEROS 32 is designed to be installed down an augered hole, plugged into a data logger, and left to log water potential data. Tensiometers will require periodic refilling when measurements go beyond the measuring range of the sensor.

For a more detailed description of how this sensor makes measurements, refer to the [TEROS 32 User Manual](#).

APPLICATIONS

- Soil-water tension measurement
- Soil-water storage measurement
- Irrigation management
- Soil temperature measurement
- In-situ retention curves

ADVANTAGES

- Plug-and-play tensiometer
- Three-wire sensor interface: power, ground, and data
- Four-wire sensor interface: power, ground, data, and SDI-12 or RS-485
- Digital sensor communicates multiple measurements over a serial interface
- Low-input voltage requirements
- Low-power design supports battery-operated data loggers
- SDI-12 or DDI Serial communications protocols
- Modbus® RTU or tensioLINK serial communications protocol
- Modern design optimized for low-cost sensing

PURPOSE OF THIS GUIDE

METER provides the information in this integrator guide to help TEROS 32 customers establish communication between these sensors and their data acquisition equipment or field data loggers. Customers using data loggers that support SDI-12 sensor communications should consult the data logger user manual. METER sensors are fully integrated into the METER system of plug-and-play sensors, cellular-enabled data loggers, and data analysis software. For more information about METER integrated systems, please contact [Customer Support](#).

COMPATIBLE FIRMWARE VERSIONS

This guide is compatible with firmware versions 2.00 or newer.

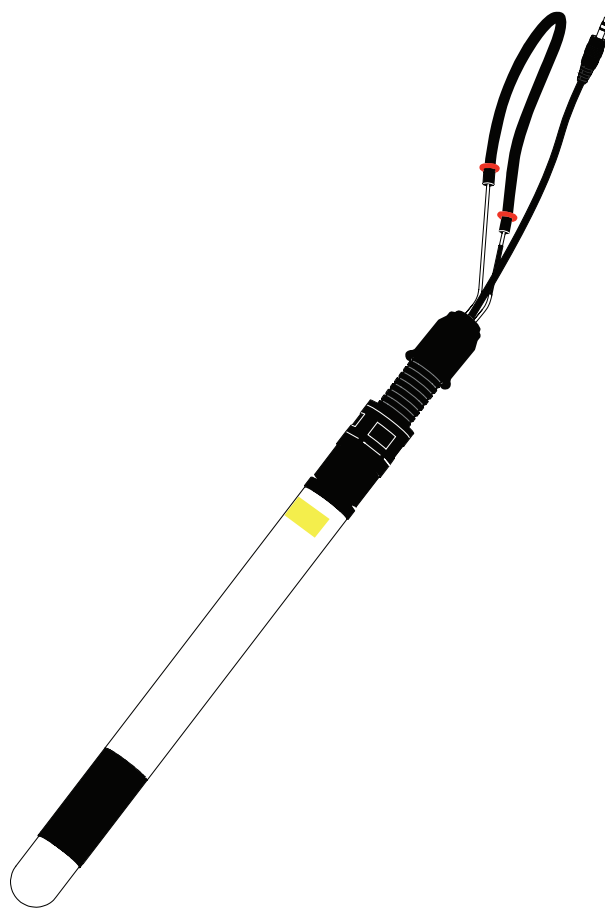


Figure 1 TEROS 32 Soil Water Potential and Temperature sensor

SPECIFICATIONS

MEASUREMENT SPECIFICATIONS

Water Potential	
Range	-85 to +50 kPa
Resolution	0.0012 kPa
Accuracy	±0.15 kPa

Temperature	
Range	-30 to +60 °C
Resolution	±0.01 °C
Accuracy	±0.1 °C between -20 and +40 °C (±1 °C outside of this range)

COMMUNICATION SPECIFICATIONS

Output
DDI Serial and SDI-12 communications protocol 3- or 4-wire cable version (Figure 3) RS-485 4-wire cable version (Figure 5)
Modbus RTU and tensioLINK serial communications protocol 3- or 4-wire cable version (Figure 3) RS-485 4-wire cable version (Figure 5)

Data Logger Compatibility
METER ZL6 and EM60 data loggers or any data acquisition system capable of 4.0- to 28.0-VDC power and serial interface with SDI-12 and/or RS-485 interface, Modbus RTU, or tensioLINK.

PHYSICAL SPECIFICATIONS

Dimensions	
Length	40.0 cm (15.75 in) 80.0 cm (31.50 in) 120.0 cm (47.24 in)
Diameter	2.5 cm (0.98 in)

Operating Temperature	
Minimum	-30 °C (0 °C for water-filled tensiometer)
Typical	NA
Maximum	50 °C

Materials	
Ceramic cup	Al ₂ O ₃ , bubble point 1,500 kPa
Shaft	PMMA
Sensor body	POM GF
Refilling tube	Stainless steel

Installation Angle	
	10° to 80° from horizontal (downward) -10° to -80° from horizontal (upward)

Cable Length	
	5 m (standard) 75 m (maximum custom cable length)
	NOTE: Contact Customer Support if a nonstandard cable length is needed.

Cable Diameter	
Stereo Plug	4.2 ±0.2 mm (0.16 ±0.01 in) with minimum jacket of 0.8 mm (0.031 in)
M12 Plug	5.5 ±0.2 mm (0.22 ±0.01 in) with minimum jacket of 1.0 mm (0.039 in)

Connector Size	
	3.50 mm (diameter) 14.4 mm (diameter M12)

Connector Types	
	Stereo plug connector or stripped and tinned wires 4-pin M12 connector or stripped and tinned wires

Conductor Gauge	
Stereo Plug	22-AWG / 24-AWG ground wire
M12 Plug	22-AWG

ELECTRICAL AND TIMING CHARACTERISTICS

Supply Voltage (power to ground)	
Minimum	4.0 V
Typical	12.0 V
Maximum	28.0 V

Digital Input Voltage (logic high)	
Minimum	1.6 V
Typical	3.3 V
Maximum	5.0 V

Digital Input Voltage (logic low)	
Minimum	-0.3 V
Typical	0.0 V
Maximum	0.9 V

Digital Output Voltage (logic high)		Power Up Time (DDI Serial)	
Minimum	NA	Minimum	125 ms
Typical	4.0 V	Typical	130 ms
Maximum	NA	Maximum	150 ms
Power Line Slew Rate		Power Up Time (SDI-12)	
Minimum	1.0 V/ms	Minimum	125 ms
Typical	NA	Typical	160 ms
Maximum	NA	Maximum	175 ms
Current Drain (during measurement)		Measurement Duration	
Minimum	18 mA	Minimum	60 ms
Typical	25 mA	Typical	65 ms
Maximum	30 mA	Maximum	70 ms
Current Drain (while asleep)		COMPLIANCE	
Minimum	0.03 mA	EM ISO/IEC 17050:2010 (CE Mark)	
Typical	0.05 mA	2014/30/EU and 2011/65/EU	
Maximum	0.90 mA	EN61326-1:2013 and EN55022/CISPR 22	

EQUIVALENT CIRCUIT AND CONNECTION TYPES

The following sections explain the TEROS 32 connection types available.

THREE-WIRE SDI-12 ONLY VERSION

Refer to [Figure 2](#), [Figure 3](#), and [Figure 4](#) to connect the TEROS 32 to a data logger. [Figure 2](#) provides a low-impedance variant of the recommended SDI-12 specification.

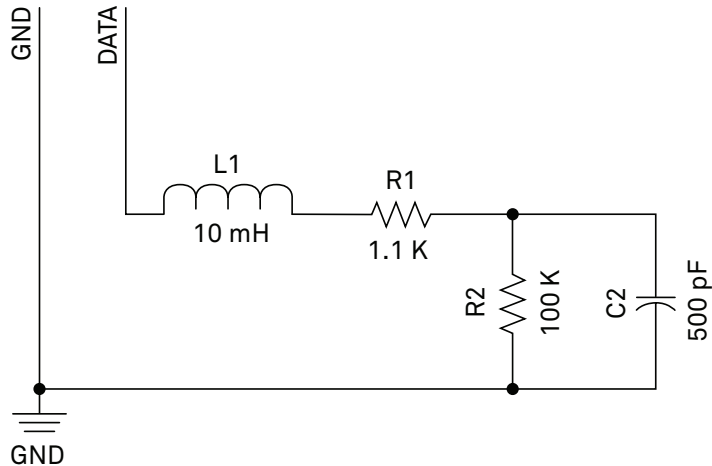


Figure 2 Equivalent circuit diagram

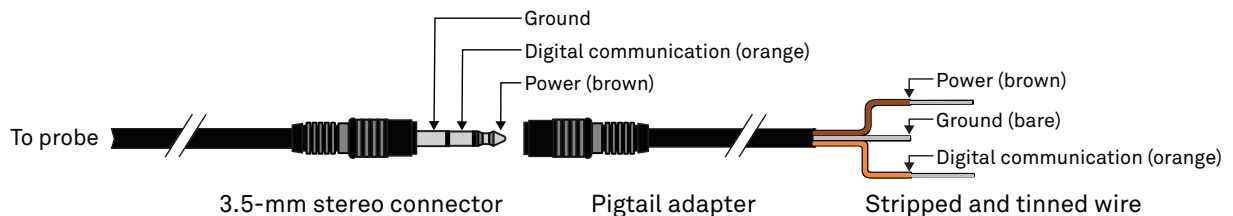


Figure 3 Three-wire stereo connector and pigtail adapter

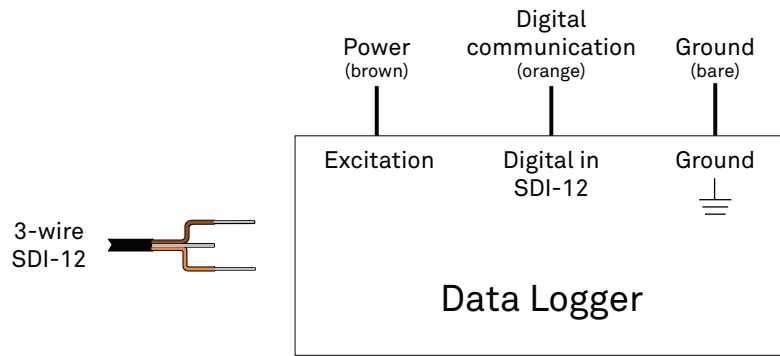


Figure 4 Three-wire SDI-12 wiring diagram

FOUR-WIRE VERSION

TEROS 32 sensors can also be ordered with a 4-pin M12 connector and optional pigtail adapter.

Connect the TEROS 32 wires to the data logger as listed below and illustrated in [Figure 5](#), [Figure 6](#), and [Figure 7](#).

- Supply wire (brown) connected to the excitation.
- Digital out wire (white) connected to digital input (SDI-12 or RS-485 A).
- Digital out wire negative (black) connected to digital input (RS-485 B).
- Ground wire (blue) connected to ground.
- Optionally, the screen wire (bare) can be connected to ground for shielding when using long cables.

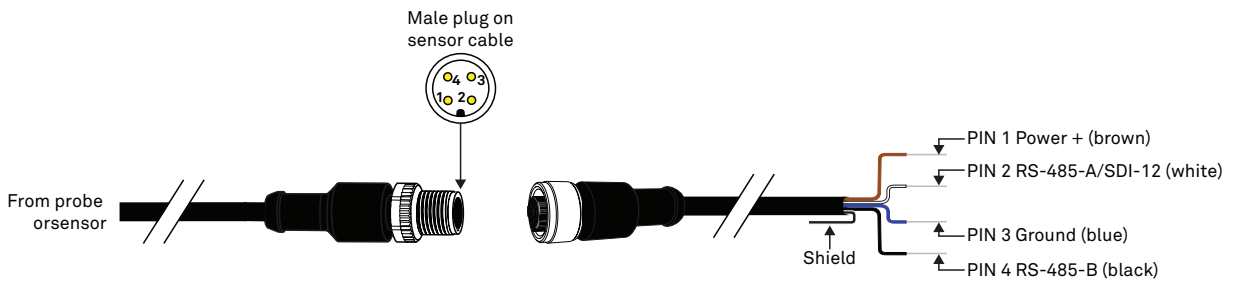


Figure 5 Four-wire M12 connector and pigtail adapter

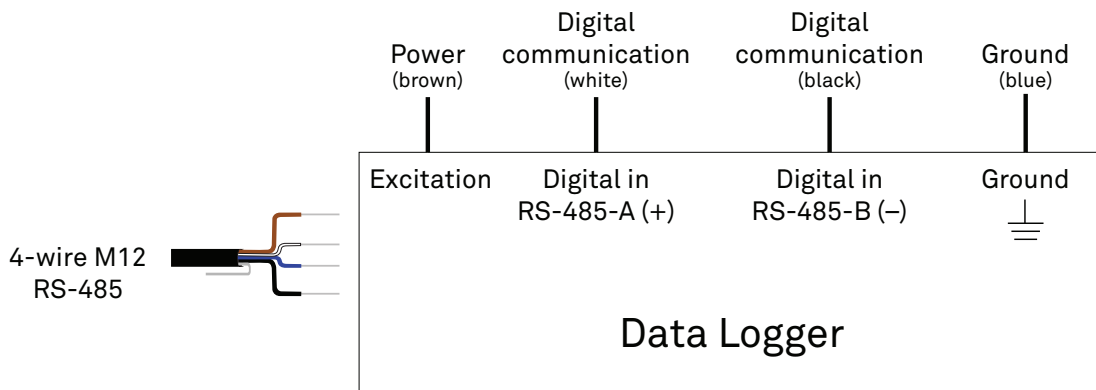


Figure 6 Four-wire M12 connector RS-485 wiring diagram

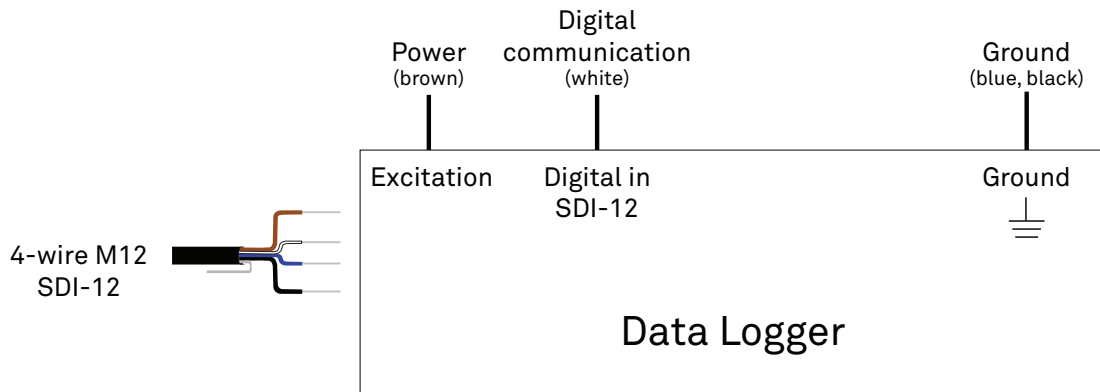


Figure 7 Four-wire M12 connector SDI-12 wiring diagram

⚠ PRECAUTIONS

METER sensors are built to the highest standards, but misuse, improper protection, or improper installation may damage the sensor and possibly void the warranty. Before integrating sensors into a sensor network, follow the recommended installation instructions and implement safeguards to protect the sensor from damaging interference.

SURGE CONDITIONS

Sensors have built-in circuitry that protects them against common surge conditions. Installations in lightning-prone areas, however, require special precautions, especially when sensors are connected to a well-grounded third-party logger.

Read the application note [Lightning surge and grounding practices](#) on the METER website for more information.

POWER AND GROUNDING

METER SDI-12 sensors can be power-cycled and read on the desired measurement interval or powered continuously and commands sent when a measurement is desired.

Ensure there is sufficient power to simultaneously support the maximum sensor current drain for all the sensors on the bus. The sensor protection circuitry may be insufficient if the data logger is improperly powered or grounded. Refer to the data logger installation instructions. Improper grounding may affect the sensor output as well as sensor performance.

Read the application note [Lightning surge and grounding practices](#) on the METER website for more information.

CABLES

Improperly protected cables can lead to severed cables or disconnected sensors. Cabling issues can be caused by many factors, including rodent damage, driving over sensor cables, tripping over the cable, not leaving enough cable slack during installation, or poor sensor wiring connections. To relieve strain on the connections and prevent loose cabling from being inadvertently snagged, gather and secure the cable traveling between the TEROS 32 and the data acquisition device to the mounting mast in one or more places. Install cables in conduit or plastic cladding when near the ground to avoid rodent damage. Tie excess cable to the data logger mast to ensure cable weight does not cause the sensor to unplug.

SENSOR COMMUNICATION

METER digital sensors feature a serial interface with shared receive and transmit signals for communicating sensor measurements on the data wire (Figure 3). The sensor supports two different protocols: SDI-12 and DDI Serial. Each protocol has implementation advantages and challenges. Please contact [Customer Support](#) if the protocol choice for the desired application is not obvious.

SDI-12 INTRODUCTION

SDI-12 is a standards-based protocol for interfacing sensors to data loggers and data acquisition equipment. Multiple sensors with unique addresses can share a common 3-wire bus (power, ground, and data). Two-way communication between the sensor and logger is possible by sharing the data line for transmit and receive

as defined by the standard. Sensor measurements are triggered by protocol command. The SDI-12 protocol requires a unique alphanumeric sensor address for each sensor on the bus so that a data logger can send commands to and receive readings from specific sensors.

Download the [SDI-12 Specification v1.3](#) to learn more about the SDI-12 protocol.

DDI SERIAL INTRODUCTION

The DDI Serial protocol is the method used by the METER data loggers for collecting data from the sensor. This protocol uses the single data line configured to transmit data from the sensor to the receiver only (simplex). Typically, the receive side is a microprocessor Universal Asynchronous Receiver/Transmitter (UART) or a general-purpose Input/Output (I/O) pin using a bitbang method to receive data. Sensor measurements are triggered by applying power to the sensor.

RS-485 INTRODUCTION (4-WIRE VERSION ONLY)

RS-485 is a robust physical bus connection to connect multiple devices to one bus. It is capable of using very long cable distances under harsh environments. TEROS 32 uses a 2-wire, half-duplex implementation of RS-485. Two wires are used for supply and two wires for the differential serial interface. One of the serial wires is also overlaid with the SDI-12 data wire. The sensor recognizes a command depending on the protocol that is used to issue a command. Instead of SDI-12, RS-485 uses two dedicated wires for the data signal. This allows the use of longer cables and is more insensitive to interference from outside sources, since the signal is related to the different wires, and supply currents do not influence the data signal. See [Wikipedia](#) for more details on RS-485.

TENSIOLINK RS-485 INTRODUCTION (4-WIRE VERSION ONLY)

tensoLINK is a fast, reliable, proprietary serial communications protocol that communicates over the RS-485 interface. This protocol is used to read out data and configure features of the device. METER provides a tensoLINK PC USB converter and software to communicate directly with the sensor, read out data, and update the firmware. Please contact [Customer Support](#) for more information about tensoLINK.

MODBUS RTU RS-485 INTRODUCTION (4-WIRE VERSION ONLY)

Modbus RTU is a common serial communications protocol used by Programmable Logic Controllers (PLCs) or data loggers to communicate with all kinds of digital devices. The communication works over the physical RS-485 connection. The combination of RS-485 for the physical connection and Modbus as serial communications protocol allows fast and reliable data transfer for a high number of sensors connected to one serial bus wire. Use the following links for more Modbus information: [Wikipedia](#) and [modbus.org](#).

INTERFACING THE SENSOR TO A COMPUTER

The serial signals and protocols supported by the sensor require some type of interface hardware to be compatible with the serial port found on most computers (or USB-to-serial adapters). METER recommends using the tensoLINK USB converter (M12 only). There are several SDI-12 interface adapters available in the marketplace; however, METER has not tested any of these interfaces and cannot make a recommendation as to which adapters work with METER sensors. METER data loggers and handheld devices can operate as a computer-to-sensor interface for making on-demand sensor measurements. For more information, please contact [Customer Support](#).

METER SDI-12 IMPLEMENTATION

METER sensors use a low-impedance variant of the SDI-12 standard sensor circuit ([Figure 2](#)). During the power-up time, sensors output a sensor reading formatted as a DDI Serial message and should not be communicated with until the power-up time has passed. After the power-up time, the sensors are compatible with all commands listed in the [SDI-12 Specification v1.3](#) except for the continuous measurement commands (aR0 through aRC9 and aRC0 through aRC9). See [page 9](#) for M, R, and C command implementations. The aR3 and aR4 commands used by METER systems use a space delimiter instead of the [SDI-12 Specification v1.3](#) standard's required sign delimiter.

Out of the factory, all METER sensors start with SDI-12 address 0 and print out the DDI Serial startup string during the power-up time. This can be interpreted by non-METER SDI-12 sensors as a pseudo-break condition followed by a random series of bits.

The TEROS 32 will omit the DDI Serial startup string when the SDI-12 address is nonzero or if `<suppressionState>` is set to 1. Changing the address to a nonzero address is recommended for this reason.

SENSOR BUS CONSIDERATIONS

SDI-12 sensor buses require regular checking, sensor upkeep, and sensor troubleshooting. If one sensor goes down, that may take down the whole bus even if the remaining sensors are functioning normally. METER SDI-12 sensors can be power-cycled and read on the desired measurement interval or powered continuously and commands sent when a measurement is desired. Many factors influence the effectiveness of the bus configuration. Visit metergroup.com for articles and virtual seminars containing more information.

SENSOR ERROR CODE

The TEROS 32 has one error code: -9999. This error code is output in place of the measured value if the sensor detects that the measurement function has been compromised and the subsequent measurement values have no meaning.

SDI-12 CONFIGURATION

Table 1 lists the SDI-12 communications configuration.

Baud Rate	1,200
Start Bits	1
Data Bits	7 (LSB first)
Parity Bits	1 (even)
Stop Bits	1
Logic	Inverted (active low)

SDI-12 TIMING

All SDI-12 commands and responses must adhere to the format in Figure 8 on the data line. Both the command and response are preceded by an address and terminated by a carriage return and line feed combination (<CR><LF>). Command and response will follow the timing shown in Figure 9.

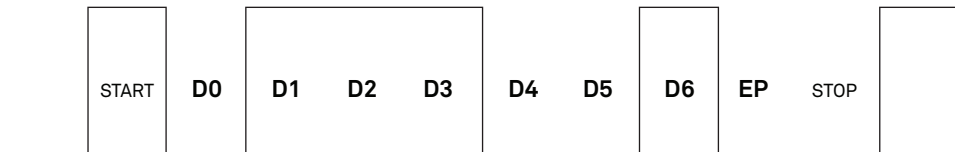


Figure 8 Example SDI-12 transmission of the character 1 (0x31)

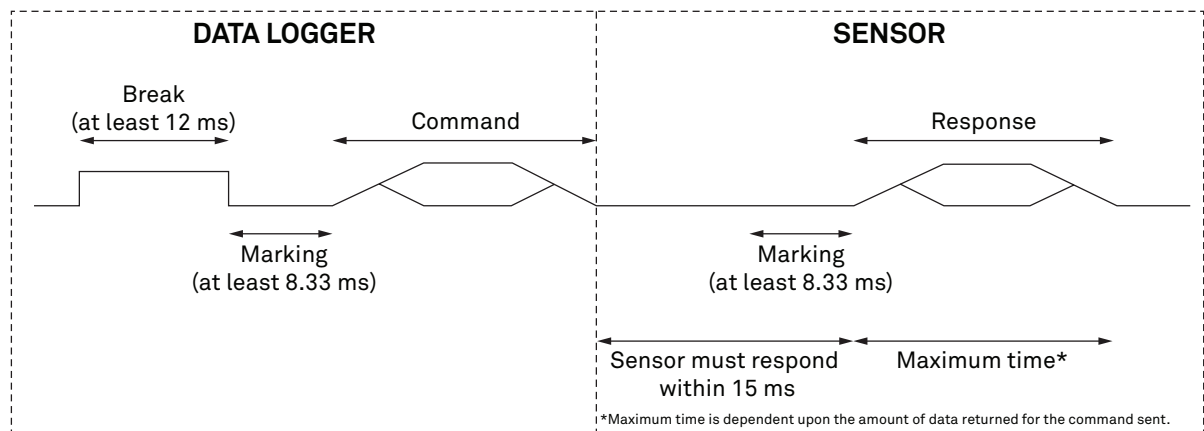


Figure 9 Example data logger and sensor communication

COMMON SDI-12 COMMANDS

This section includes tables of common SDI-12 commands that are often used in an SDI-12 system and the corresponding responses from METER sensors.

IDENTIFICATION COMMAND (aI!)

The Identification command can be used to obtain a variety of detailed information about the connected sensor. An example of the command and response is shown in [Example 1](#), where the command is in **bold** and the response follows the command.

Example 1 **1I!**113METER_ _ _ TER32_ _100631800001

Parameter	Fixed Character Length	Description
1I!	3	Data logger command. Request to the sensor for information from sensor address 1 .
1	1	Sensor address. Prepended on all responses, this indicates which sensor on the bus is returning the following information.
13	2	Indicates that the target sensor supports SDI-12 Specification v1.3 .
METER_ _ _	8	Vendor identification string. (METER and three spaces _ _ _ for all METER sensors)
TER32_ _	6	Sensor model string. This string is specific to the sensor type. For the TEROS 32, the string is TER32_ _ .
100	3	Sensor version. This number divided by 100 is the METER sensor version (e.g., 100 is version 1.00).
631800001	≤13, variable	Sensor serial number. This is a variable length field. It may be omitted for older sensors.

CHANGE ADDRESS COMMAND (aAB!)

The Change Address command is used to change the sensor address to a new address. All other commands support the wildcard character as the target sensor address except for this command. All METER sensors have a default address of 0 (zero) out of the factory. Supported addresses are alphanumeric (i.e., a–z, A–Z, and 0–9). An example output from a METER sensor is shown in [Example 2](#), where the command is in **bold** and the response follows the command.

Example 2 **1A0!**0

Parameter	Fixed Character Length	Description
1A0!	4	Data logger command. Request to the sensor to change its address from 1 to a new address of 0 .
0	1	New sensor address. For all subsequent commands, this new address will be used by the target sensor.

ADDRESS QUERY COMMAND (?!)

While disconnected from a bus, the Address Query command can be used to determine which sensors are currently being communicated with. Sending this command over a bus will cause a bus contention where all the sensors will respond simultaneously and corrupt the data line. This command is helpful when trying to isolate a failed sensor. [Example 3](#) shows an example of the command and response, where the command is in **bold** and the response follows the command. The question mark (?) is a wildcard character that can be used in place of the address with any command except the Change Address command.

Example 3 `?!0`

Parameter	Fixed Character Length	Description
<code>?!</code>	2	Data logger command. Request for a response from any sensor listening on the data line.
<code>0</code>	1	Sensor address. Returns the sensor address to the currently connected sensor.

COMMAND IMPLEMENTATION

The following tables list the relevant Measurement (M) and Concurrent (C) commands and subsequent Data (D) commands, when necessary.

MEASUREMENT COMMANDS IMPLEMENTATION

Measurement (M) commands are sent to a single sensor on the SDI-12 bus and require that subsequent Data (D) commands are sent to that sensor to retrieve the sensor output data before initiating communication with another sensor on the bus.

Please refer to [Table 2](#) for an explanation of the command sequence, and to [Table 11](#) for an explanation of response parameters.

Table 2 `aM!` command sequence

Command	Response
This command reports instantaneous values.	
<code>aM!</code>	<code>atttn</code>
<code>aD0!</code>	<code>a+<matricPotential>±<temperature>+<meta></code>
<code>aD1!</code>	<code>a±<pitch>±<roll></code>
<code>aD2!</code>	<code>a+<uPressure>±<temperature></code>

NOTE: The measurement and corresponding data commands are intended to be used back to back. After a measurement command is processed by the sensor, a service request `<CR><LF>` is sent from the sensor signaling the measurement is ready. Either wait until `ttt s` have passed or wait until the service request is received before sending the data commands. See the [SDI-12 Specifications v1.3](#) document for more information.

CONCURRENT MEASUREMENT COMMANDS IMPLEMENTATION

Concurrent Measurement (C) commands are typically used with sensors connected to a bus. C commands for this sensor deviate from the standard C command implementation. First, send the C command, wait the specified amount of time detailed in the C command response, and then use D commands to read its response prior to communicating with another sensor.

Please refer to [Table 3](#) for an explanation of the command sequence and to [Table 11](#) for an explanation of response parameters.

Table 3 aC! measurement command sequence

Command	Response
This command reports instantaneous values.	
aC!	atttnn
aD0!	a+<matricPotential>±<temperature>+<meta>
aD1!	a±<pitch>±<roll>
aD2!	a+<uPressure>±<temperature>

NOTE: Please see the [SDI-12 Specifications v1.3](#) document for more information.

VERIFICATION COMMAND IMPLEMENTATION

The Verification (V) command is intended to give users a means to determine information about the current state of the sensor. First the V command is sent followed by D commands to read the response.

Please refer to [Table 4](#) for an explanation of the command sequence and see [Table 11](#) for an explanation of response parameters.

Table 4 aV! measurement command sequence

Command	Response
This command reports instantaneous values.	
aV!	atttnn
aD0!	a+<meta>

NOTE: Please see the [SDI-12 Specifications v1.3](#) document for more information.

EXTENDED COMMANDS IMPLEMENTATION

Extended (X) commands provide sensors with a means of performing manufacturer-specific functions. METER implements the following extended command to allow integrators an alternative way to turn off the DDI Serial string. Sending the command without a parameter will return the current setting for <suppressionState>. Sending a value for <suppressionState> will set that value. Extended commands are required to be prefixed with the address and terminated with an exclamation point. Responses are required to be prefixed with the address and terminated with <CR><LF>.

METER implements the following X commands:

- aXRx! to trigger a sensor measurement and return the data automatically after the readings are completed without needing to send additional commands.
- aX0! (with capital O) to suppress the DDI Serial string.

Please refer to [Table 5](#) through [Table 7](#) for an explanation of the command sequence and see [Table 11](#) for an explanation of response parameters.

Table 5 aXRx! measurement command sequence

Command	Response
aXRx!	a<TAB> <matricPotential> <temperature><CR><sensorType><Checksum><CRC>

NOTE: This command does not adhere to the SDI-12 response format or timing. The values in this command are space delimited. As such a + sign is not assigned between values, and a – sign is only present if the value is negative. See [METER SDI-12 Implementation](#) for more information.

Table 6 aX0! measurement command sequence

Command	Response
aX0!	a<suppressionState>
aX0<suppressionState>	aOK

NOTE: This command uses capital O as in Oscar (not a zero). See [METER SDI-12 Implementation](#) for more information.

Table 7 aXR4! measurement command sequence

Command	Response
aXR4!	a<TAB> <matricPotential> <temperature><CR><sensorType><Checksum><CRC>

NOTE: This command does not adhere to the SDI-12 response format or timing. The values in this command are space delimited. As such a + sign is not assigned between values, and a – sign is only present if the value is negative. See [METER SDI-12 Implementation](#) for more information.

CONTINUOUS MEASUREMENT COMMANDS IMPLEMENTATION

Continuous (R) measurement commands trigger a sensor measurement and return the data automatically after the readings are completed without needing to send a D command.

Please refer to [Table 8](#) through [Table 10](#) for an explanation of the command sequence and see [Table 11](#) for an explanation of response parameters.

Table 8 aR0! measurement command sequence

Command	Response
aR0!	a±<matricPotential>±<temperature>

NOTE: This command does not adhere to the SDI-12 response timing. See [METER SDI-12 Implementation](#) for more information.

Table 9 aR3! measurement command sequence

Command	Response
aR3!	a±<TAB><matricPotential> <temperature><CR><sensorType><Checksum><CRC>

NOTE: This command does not adhere to the SDI-12 response format or timing. The values in this command are space delimited. As such a + sign is not assigned between values, and a – sign is only present if the value is negative. See [METER SDI-12 Implementation](#) for more information.

Table 10 aR4! measurement command sequence

Command	Response
aR4!	a±<TAB><matricPotential> <temperature><CR><sensorType><Checksum><CRC>

NOTE: This command does not adhere to the SDI-12 response format or timing. The values in this command are space delimited. As such a + sign is not assigned between values, and a – sign is only present if the value is negative. See [METER SDI-12 Implementation](#) for more information.

PARAMETERS

[Table 11](#) lists the parameters, unit measurement, and a description of the parameters returned in command responses for TEROS 32.

Table 11 Parameter descriptions

Parameter	Unit	Description
±	—	Positive or negative sign denoting sign of the next value
a	—	SDI-12 address
n	—	Number of measurements (fixed width of 1)
nn	—	Number of measurements with leading zero if necessary (fixed width of 2)
ttt	s	Maximum time measurement will take (fixed width of 3)
<TAB>	—	Tab character

Table 11 Parameter descriptions (continued)

Parameter	Unit	Description
<CR>	—	Carriage return character
<LF>	—	Line feed character
<matricPotential>	kPa	Matric potential
<temperature>	°C	Sensor temperature
<meta>	—	Auxiliary sensor information 0: No sensor error 1: Sensor has experienced temperatures below freezing 16: Sensor refill orientation error 17: Both 1 and 16
<pitch>	°	Sensor pitch (0° is parallel to Earth's surface)
<roll>	°	Sensor roll (0° is top reference point straight up)
<uPressure>	kPa	Uncalibrated transducer pressure
<suppressionState>	—	0: DDI Serial string unsuppressed 1: DDI Serial string suppressed
<sensorType>	—	ASCII character denoting the sensor type For TEROS 32, the character is b
<Checksum>	—	METER serial checksum
<CRC>	—	METER 6-bit CRC

SENSOR METADATA VALUE

The sensor metadata value contains information to help alert users to sensor-identified conditions that may compromise optimal sensor operation. The output of the aV!, aD0! sequence will output a <meta> integer value. This integer represents a binary bitfield, with each individual bit representing an error flag. Table 12 contains a list of possible error flags that can be set by the TEROS 32. If multiple error flags are set, the sensor metadata integer value will be the sum of their individual values. To decode an integer value not explicitly called out in Table 12, find the largest error flag value in the table that will fit in the integer value and accept that error as being present. Then, subtract that error flag value from the integer value and repeat the process on the remainder until the result is 0. For example, a sensor metadata integer value of 273 is the sum of individual error flag values 256 + 16 + 1, so this sensor has freezing error flag, sensor misorientation error flag, and sensor calibrations lost or corrupted error flag.

Table 12 Error flag values and issue resolution

Error Flag Value	Issue Present	Resolution
0	No issue present	NA
1	Sensor has experienced temperature below freezing	Contact Customer Support . Irreversible sensor damage is likely.
16	Sensor misorientation will prevent effective refilling	Use ZENTRA Utility app to reorient the pitch or roll of the sensor.
128	Sensor firmware is corrupt	Contact Customer Support for instructions on reloading firmware.
256	Sensor calibrations lost or corrupted	Contact Customer Support for instructions on reloading sensor calibrations.

DDI SERIAL COMMUNICATION

The DDI Serial communications protocol is ideal for systems that have dedicated serial signaling lines for each sensor or use a multiplexer to handle multiple sensors. The serial communications are compatible with many TTL serial implementations that support active-high logic levels using 0–4.0 V signal levels. When the sensor is first powered, it automatically makes measurements of the integrated transducers, then outputs a response

over the data line. Systems using this protocol control the sensor excitation to initiate data transfers from the sensor. This protocol is subject to change as METER improves and expands the line of digital sensors and data loggers.

The TEROS 32 will omit the DDI Serial startup string when the SDI-12 address is nonzero.

NOTE: Out of the factory, all METER sensors start with SDI-12 address 0, and print out the startup string when power cycled.

DDI SERIAL TIMING

Table 13 lists the DDI Serial communication configuration.

Table 13 DDI Serial communication configuration

Baud Rate	1,200
Start Bits	1
Data Bits	8 (LSB first)
Parity Bits	0 (none)
Stop Bits	1
Logic	Standard (active high)

At power up, the sensor will pull the data line high within 100 ms to indicate that the sensor is taking a reading (Figure 10). When the reading is complete, the sensor begins sending the serial signal out the data line adhering to the format shown in Figure 11. Once the data is transmitted, the sensor goes into SDI-12 communication mode. To get another serial signal, the sensor must be power cycled.

NOTE: Sometimes the signaling from the sensor can confuse typical microprocessor UARTs. The sensor holds the data line low while taking measurements. The sensor raises the line high to signal to the logger that it will send a measurement. Then the sensor may take some additional measurements before starting to clock out the first data byte starting with a typical start bit (low). Once the first start bit is sent, typical serial timing is valid; however, the signal transitions before this point are not serial signaling and may be misinterpreted by the UART.

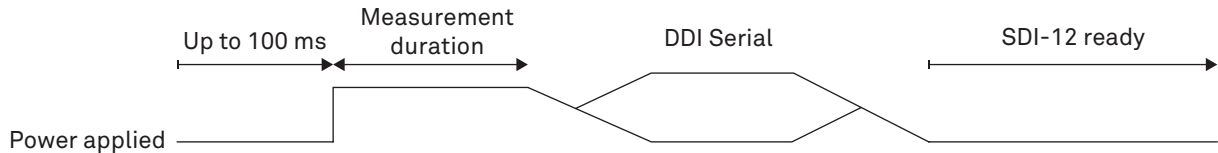


Figure 10 Data line DDI Serial timing

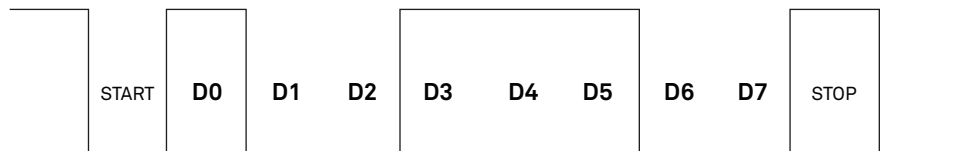


Figure 11 Example DDI Serial transmission of the character 9 (0x39)

DDI SERIAL RESPONSE

Table 14 details the DDI Serial response.

Table 14 DDI Serial response

Command	Response
NA	<TAB><matricPotential><temperature><meta><CR><sensorType><Checksum><CRC>

NOTE: There is no actual command. The response is returned automatically upon power up.

DDI SERIAL CHECKSUM

These checksums are used in the continuous commands R3 and R4 as well as the DDI Serial response. The legacy checksum is computed from the start of the transmission to the sensor identification character, excluding the sensor address.

Example input is `<TAB>92.953 24.0 0<CR>b` and the resulting checksum output is `K`.

```
uint8_t LegacyChecksum(const char * response)
{
    uint16_t length;
    uint16_t i;
    uint16_t sum = 0;

    // Finding the length of the response string
    length = strlen(response);

    // Adding characters in the response together
    for( i = 0; i < length; i++ )
    {
        sum += response[i];
        if(response[i] == '\r')
        {
            // Found the beginning of the metadata section of the response
            break;
        }
    }

    // include the sensor type into the checksum
    sum += response[++i];

    // Convert checksum to a printable character
    sum = sum % 64 + 32;

    return sum;
}
```

The more robust CRC6 utilizes the CRC-6-CDMA2000-A polynomial with the value 48 added to the results to make this a printable character and is computed from the start of the transmission to the legacy checksum character, excluding the sensor address.

CRC6 checksum example input is `<TAB>92.953 24.0 0<CR>bK` and the resulting checksum output is `A`

```

uint8_t CRC6_Offset(const char *buffer)
{
    uint16_t byte;
    uint16_t i;
    uint16_t bytes;
    uint8_t bit;
    uint8_t crc = 0xfc; // Set upper 6 bits to 1's

    // Calculate total message length—updated once the meta data section is found
    bytes = strlen(buffer)

    // Loop through all the bytes in the buffer
    for(byte = 0; byte < bytes; byte++)
    {
        // Get the next byte in the buffer and XOR it with the crc
        crc ^= buffer[byte];

        // Loop through all the bits in the current byte
        for(bit = 8; bit > 0; bit--)
        {
            // If the uppermost bit is a 1...
            if(crc & 0x80)
            {
                // Shift to the next bit and XOR it with a polynomial
                crc = (crc << 1) ^ 0x9c;
            }
            else
            {
                // Shift to the next bit
                crc = crc << 1;
            }
        }
        if(buffer[byte] == '\r')
        {
            // Found the beginning of the metadata section of the response
            // both sensor type and legacy checksum are part of the crc6
            // this requires only two more iterations of the loop so reset
            // "bytes"

            // bytes is incremented at the beginning of the loop, so 3 is added
            bytes = byte + 3;
        }
    }

    // Shift upper 6 bits down for crc
    crc = (crc >> 2);

    // Add 48 to shift crc to printable character avoiding \r \n and !
    return (crc + 48);
}

```

METER MODBUS RTU SERIAL IMPLEMENTATION

Modbus over Serial Line is specified in two versions - ASCII and RTU. METER TEROS 32 sensors communicate using RTU mode exclusively. The following explanation is always related to RTU.

Table 15 lists the Modbus RTU communication configuration.

Baud Rate	9,600
Start Bits	1
Data Bits	8 (LSB first)
Parity Bits	0 (none)
Stop Bits	1
Logic	Standard (active high)

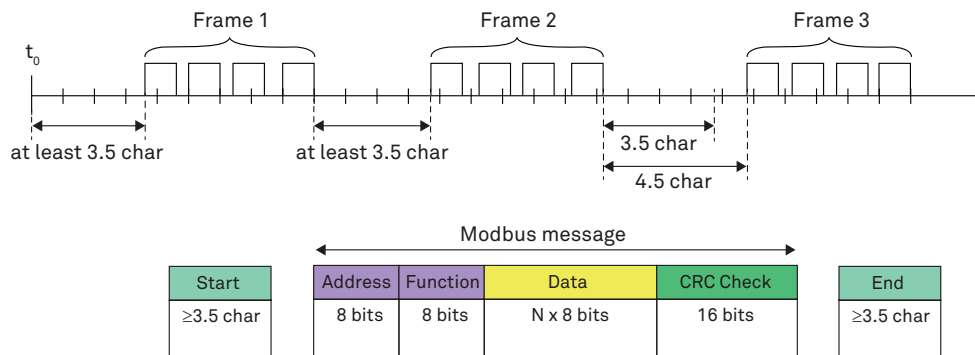


Figure 12 Modbus RTU message frame

A message in Modbus RTU format is shown in Figure 12. The length of the message is determined by the size of the data. The format of each byte in the message has 10 bits including the Start and Stop bit. Each byte is sent from left to right: Least Significant Bit (LSB) to Most Significant Bit (MBS). If No parity is implemented, an additional Stop bit is transmitted to fill out the character frame to a full 11-bit asynchronous character.

The Modbus application layer implements a set of standard function codes that are divided into three categories—public, user-defined, and reserved. This document covers TEROS sensor-supported public functions that are well-defined function codes documented in the Modbus Organization, Inc. (modbus.org) community.

For a reliable interaction between the TEROS sensors and a Modbus Master, a minimum 50 ms delay is required between every Modbus command sent on the RS-485 bus. An additional timeout is required for every Modbus query. This timeout is device specific and depends on the quantity of the polled registers. Generally 100 ms is sufficient for most TEROS sensors.

SUPPORTED MODBUS FUNCTIONS

Table 16 lists the Modbus function codes, action, and description.

Function Code	Action	Description
01	Read coil/port status	Reads the on/off status of discrete output(s) in the ModBusSlave
02	Read input status	Reads the on/off status of discrete input(s) in the ModBusSlave
03	Read holding registers	Reads the binary contents of holding register(s) in the ModBusSlave
04	Read input registers	Reads the binary contents of input register(s) in the ModBusSlave
05	Force single coil/port	Forces a single coil/port in the ModBusSlave to either on or off
06	Write single register	Writes a value into a holding register in the ModBusSlave
15	Force multiple coils/ports	Forces multiple coils/ports in the ModBusSlave to either on or off
16	Write multiple registers	Writes values into a series of holding registers in the ModBusSlave

DATA REPRESENTATION AND REGISTER TABLES

Data values (setpoint values, parameters, sensor specific measurement values, etc.) sent to and from the TEROS sensors uses both 16-bit and 32-bit holding (or input) registers with a 4-digit address notation. The address spaces are virtually distributed in different blocks for each of the different data types. This is an approach to the Modbus Enron implementation. [Table 17](#) shows the four main tables used by the TEROS sensors with their respective access rights. [Table 18](#) describes the sub-blocks for each different data type representation.

Table 17 Modbus Primary Tables

Register Number	Table Type	Access	Description
1XXX	Discrete output coils	Read/Write	On/Off status or setup flags for the sensor
2XXX	Discrete input contacts	Read	Sensor status flags
3XXX	Analog input registers	Read	Numerical input variables from the sensor (actual sensor measurements)
4XXX	Analog output holding registers	Read/Write	Numerical output variables for the sensor (parameters, setpoint values, calibrations, etc.)

For example, register 3001 is the first analog input register (first data address for the input registers). The numeric value stored here would be a 16-bit unsigned integer-type variable that represents the first sensor measurement parameter (pressure value). The same measurement parameter (pressure value) could be read at register 3201, but this time as a 32-bit floating-point value with a Big-Endian format. If the Modbus Master (Datalogger or a PLC) supports only 32-bit float-values with a Little-Endian format, then one could read the same measurement parameter (same pressure value) at register 3301. The Virtual Sub-Blocks are meant to simplify the user's effort in programming the Modbus query of the sensors.

Table 18 Modbus Virtual Sub-Blocks

Register Number	Access	Size	Sub-Table Data Type
X001–X009	Read/Write	16 bit	Unsigned integer
X101–X199	Read/Write	16 bit	Signed integer
X201–X299	Read/Write	32 bit	Float Big-Endian format
X301–X399	Read/Write	32 bit	Float Little-Endian format

REGISTER MAPPING

Table 19 Holding Registers

4001	Modbus Slave Address
Detailed description	Read or update the sensor's Modbus address
Data type	Unsigned integer
Allowed Range	0–247
Unit	—
Comments	Updated slave address will be stored in the sensor's nonvolatile memory

Table 20 Input Registers

3201	Soil Water Potential
Detailed description	Absolute pressure value
Data type	32-bit floating Big-Endian
Allowed Range	–95 to +200
Unit	kPa
Comments	For a correct water potential measurement, a separate barometric (reference) pressure sensor is needed.

Table 20 Input Registers (continued)

3202	Soil Temperature
Detailed description	High accuracy on-board temperature measurement
Data type	32-bit floating Big-Endian
Allowed Range	-30 to +60
Unit	degC
Comments	—
3203	Sensor Supply Voltage
Detailed description	On board supply voltage measurement
Data type	32-bit floating Big-Endian
Allowed Range	-10 to +60
Unit	Volts
Comments	—
3204	Installation Pitch Angle
Detailed description	Tensiometer installation pitch angle
Data type	32-bit floating Big-Endian
Allowed Range	-180 to +180
Unit	deg
Comments	Sensor failure will output a 9999 value
3205	Installation Roll Angle
Detailed description	Tensiometer installation pitch angle
Data type	32-bit floating Big-Endian
Allowed Range	-90 to +90
Unit	deg
Comments	Sensor failure will output a 9999 value

EXAMPLE USING A CR6 DATALOGGER AND MODBUS RTU

The Campbell Scientific, Inc. CR6 Measurement and Control Datalogger supports Modbus master and Modbus slave communication for integration in Modbus SCADA networks. The Modbus communications protocol facilitates the exchange of information and data between a computer/HMI software, instruments (RTUs), and Modbus-compatible sensors. The CR6 datalogger communicates in RTU mode exclusively. In a Modbus network, each slave device has a unique address. Therefore, sensor devices must be properly configured before being connected to a Modbus Network. Addresses range from 1 to 247. Address 0 is reserved for universal broadcasts.

PROGRAMMING A CR6 DATALOGGER

The programs running on the CR6 (and CR1000) dataloggers are written in CRBasic, a language developed by Campbell Scientific. It is a high-level language designed to provide an easy, yet extremely flexible and powerful method of instructing the datalogger how and when to take measurements, process data, and communicate. Programs can be created using either the [ShortCut Software](#) or be edited using the [CRBasic Editor](#), both available for downloading as a stand-alone application on the official Campbell Scientific website.

A typical CRBasic program for a Modbus application consists of the following:

- Variables and constants declarations (public or private)
- Units declarations
- Configuration parameters
- Data tables declarations
- Logger initializations
- Scan (Main Loop) with all the sensors to be queried
- Function call to the data tables

CR6 DATALOGGER RS-485 CONNECTION INTERFACE

The universal (U) terminal of the CR6 offers 12 channels that connect to nearly any sensor type. It gives the CR6 the ability to match more applications and eliminates the use of many external peripherals.

The Modbus CR6 connection shown in [Figure 13](#) uses the RS-485 (A/B) interface mounted on terminals (C1–C2) and (C3–C4). These interfaces can operate in Half-Duplex and Full-Duplex. The serial interface of the TEROS sensor used for this example is connected to (C1–C2) terminals.

TEROS 32 to CR6 Datalogger Wiring Diagram

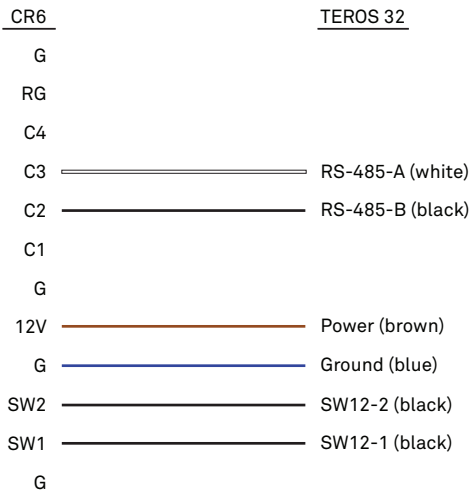


Figure 13 RS-485 interface

After assigning the TEROS sensor a unique Modbus Slave Address, it can be wired according to [Figure 13](#) to the CR6 logger. Make sure to connect the black and the white wires according to their signals respectively to C1 and C2 ports. The brown wire to 12 V (V+) and the brown to G (GND). If the power supply must be controlled through the program, connect the brown wire directly to one of the SW12 terminals (switched 12 V outputs).

EXAMPLE PROGRAMS

```
'CR6 DataLogger
'This is an example program for reading out the Teros31 Tensiometer using a CR6
'datalogger and the MODBUS RTU protocol over a RS-485 Bus. The measurement values polled
'from the sensor will be: Water Potential, Temperature and the Sensor's Supply voltage.

'This program runs a scan every 1 Min and stores the data in a 1 Min table.

'Declare Constants
Const TEROS_MB_ADDR=1 'Teros31 Modbus slave address
Const MB_TIMEOUT=10 '100ms timeout (value * 0.01sec)
Const MB_RETRIES=1

'Declare Public Variables
Public PTemp, batt_volt
Public mb_status ' variable used for monitoring the modbus poll status

'Declare Private variables
Dim Measurements(3) 'array for holding the measurements values read from the sensor

'Aliases used for the Teros31-32
Alias Measurements(1)= Water_Potential
Alias Measurements(2)= Temperature
Alias Measurements(3)= Sensor_Supply

'Declare Units
Units Water_Potential=hPa
Units Temperature=degC
Units Sensor_supply=V

'Define Data Tables.
DataTable (Teros_Table,1,-1) 'Set table size to # of records, or -1 to auto allocate.
DataInterval (0,1,Min,10) 'Store new measurement every 1 Minute
Minimum (1,batt_volt,FP2,False,False)
Sample (1,PTemp,FP2)
Sample (3,Measurements(),IEEE4)

EndTable

'Main Program

BeginProg

SW12(2,1) 'Switch ON the SW12-2 terminal (if used for powering the Teros sensor)

SerialOpen(ComC1,9600,3,2,50,4) 'open communication port, setup for RS-485
'(BaudRate, Format, TXDelay, BufferSize, CommsMode)

Scan (1,Min,0,0) 'Scan Loop
PanelTemp (PTemp,15000)
Battery (batt_volt)

'Read multiple Input registers from the Teros sensors using a 32 bit float, Big-Endian
'format
ModbusMaster(mb_status,ComC1,9600,TEROS_MB_ADDR,4,Measurements(),3201,3,MB_RETRIES,MB_
TIMEOUT,2)

'Call Output Tables
CallTable Teros_Table

NextScan

EndProg
```

CUSTOMER SUPPORT

NORTH AMERICA

Customer service representatives are available for questions, problems, or feedback Monday through Friday, 7:00 am to 5:00 pm Pacific time.

Email: support.environment@metergroup.com
sales.environment@metergroup.com

Phone: +1.509.332.5600

Fax: +1.509.332.5158

Website: metergroup.com

EUROPE

Customer service representatives are available for questions, problems, or feedback Monday through Friday, 8:00 to 17:00 Central European time.

Email: support.europe@metergroup.com
sales.europe@metergroup.com

Phone: +49 89 12 66 52 0

Fax: +49 89 12 66 52 20

Website: metergroup.de

If contacting METER by email, please include the following information:

Name	Email address
Address	Instrument serial number
Phone number	Description of problem

NOTE: For products purchased through a distributor, please contact the distributor directly for assistance.

REVISION HISTORY

The following table lists document revisions.

Revision	Date	Compatible Firmware	Description
03	10.2022	2.00	Included 4-wire, M12 connector information, edited Sensor Metadata Value, corrected link for SDI-12 Specification v1.3, updated power-up time for SDI-12
02	3.27.2020	1.01	Updated DDI Serial reponse table
01	1.10.2020	1.01	Added sections: Sensor Error Code, Verification Command Implementation, Extended Commands Implementation, and Sensor Metadata Value
00	9.13.2019	1.00	Initial release